




CARTRIDGE FILTERS

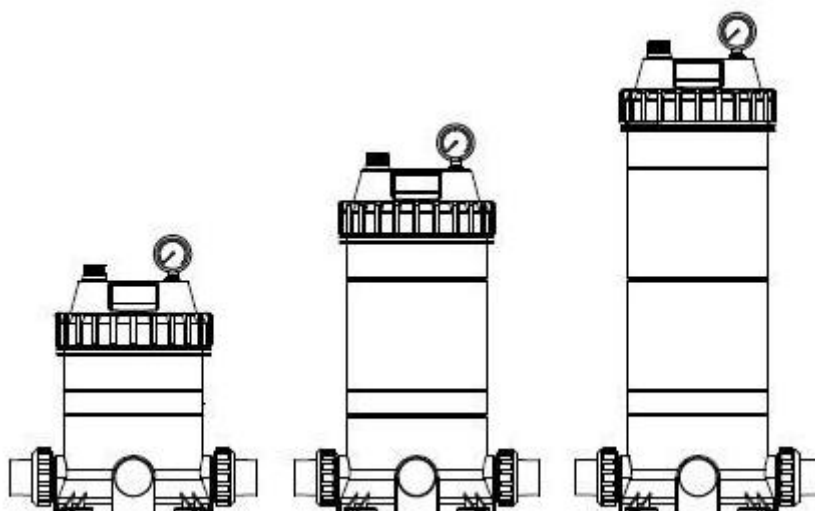

Models: CF50, CF75, CF100, CF150,

The installation of this product should be carried out by a qualified pool technician, following the installation instructions provided in this manual. Incorrect installation may void warranty claims. Ensure you retain proof of purchase for this item. Please pass these instructions on to the owner of this equipment.

YOUR NEPTUNE FOR SWIMMING POOLS CARTRIDGE FILTER

Congratulations on your purchase of a quality product from the range of pool and spa equipment available from NEPTUNE FOR SWIMMING POOLS. You are assured of many years of reliable and efficient performance from your NEPTUNE FOR SWIMMING POOLS filter backed by a 2-year tank warranty.

NEPTUNE FOR SWIMMING POOLS cartridge filters have been specifically designed for the filtration of spa and swimming pool water. They should not be used for any other purpose without first consulting your NEPTUNE FOR SWIMMING POOLS dealer.

NEPTUNE FOR SWIMMING POOLS cartridge filters provide economy, high performance and convenience in a well-designed pressure filter. The polyester element can be removed quickly for rinse cleaning without water loss.

NEPTUNE FOR SWIMMING POOLS cartridge filters feature large filter areas, which ensure even water distribution, peak filtration performance and longer filter cycles. The corrosion-resistant construction of NEPTUNE FOR SWIMMING POOLS cartridge filters provides long life and durability.

NEPTUNE FOR SWIMMING POOLS cartridge filters are capacity matched with a wide range of pool and spa pumps available from the dealer network, forming a total pool filtration system built to last. Take care to match the pump and filter capacities to gain maximum performance and efficiency.

THE SPARKLING CLEAR WATER DIFFERENCE

Cartridge filtration is an effective trouble-free proven method of filtration. Pool water enters the filter and passes through a polyester single element cartridge. Suspended particles are trapped and the water is returned to the pool. As the build-up of dirt in the element increases, so the water pressure rises and the flow decreases. When the pressure reaches an unacceptable level, the element must be removed and cleaned (spray washing with a common garden hose is generally sufficient)

INSTALLATION AND OPERATION INSTRUCTIONS

LOCATION

The filter should be placed in its permanent location, preferably as close to the pool or spa as practicable. Position the filter tank and pump on a level concrete slab or similar base. Allow sufficient space around the filter for routine maintenance and provide for adequate ventilation and drainage.

Place the pump in position on the slab and locate the filter alongside with the appropriate pump inlet connection orientated towards the pump. Refer to the 'Specifications' section for the minimum clearance measurements required for each model.

WEATHER PROTECTION

NEPTUNE FOR SWIMMING POOLS cartridge filters are constructed of corrosion resistant materials. However, to ensure years of reliable performance, it is recommended that the filtration system be adequately protected from the weather.

ASSEMBLY

Assemble the pressure gauge to the filter lid using TEFLON tape on the male thread. Do not over tighten.

PIPE CONNECTIONS

Piping should be supported independently and not impose heavy loads on the filter or pump. Use 40mm or 50mm PVC pipe for pump and pool return lines. 50mm should always be used if length of piping is over 15mm. NEPTUNE FOR SWIMMING POOLS cartridge filters are supplied with quick connect couplings suitable for 40mm LD.PVC pipe or 50mm OD fittings.

If the pump and filter are located below pool water level, it is necessary to fit isolating valves in the pipe between the pump and the pool, and in the return line from the filter to the pool.

1. Pump to filter

NEPTUNE FOR SWIMMING POOLS cartridge filters are equipped with two inlet ports marked 'INLET'. Select the inlet port most suitable for the installation and plug the other inlet port with blanking cap provided. Using quick connect couplings, connect the pool pump delivery piping to the selected inlet port couplings, connect the pool pump delivery piping to the selected inlet port. Tighten by hand only. Ensure the O'ring lubricant and in the correct position.

2. Filter to pool return

Using quick connect couplings, connect the pool return piping to the filter fitting marked 'OUTLET'. Tighten the fitting by hand only. Ensure the O'ring on the fitting is clean, lubricated with O'ring lubricant and in the correct position.

The filter base is provided with four mounting holes to enable it to be secured, if required.

FILTER OPERATION

1. Make sure the pump is primed according to manufacturer's directions.
2. Make sure all valves are open on suction and discharge lines. Ensure the air bleed valve on the filter lid is open and the lid lock ring is in place and secure.
3. Start the pump. Close the air bleed valve when water is expelled.
4. To determine the correct operating conditions with a clean filter, check that the pressure gauge reading is 80kpa or below.
5. Record the pressure gauge reading or mark the needle position on the face of the pressure gauge.
6. Operate the filter for a sufficient time to circulate the total pool water volume daily. The filter should also be operated at all times the pool is in use and for about one hour afterwards. During winter, the running time may be reduced. Filter operating requirements will vary for spa applications depending upon the system design, type and size of spa. Consult your builder or spa supplier.
7. When the pressure gauge reading is 50-70kpa higher than the 'clean filter' reading as in (4) above, it is time to clean the cartridge element (see' Cartridge Cleaning Procedure)

CARTRIDGE CLEANING PROCEDURE

When the filter gauge reading is 50-70kpa above the clean filter gauge reading cleaning the single element cartridge is required. To perform the cleaning procedures-

1. Switch off the pump.
2. Close isolating valves on suction and discharge lines where fitted.
3. Open the air bleed valve on the filter lid. Unscrew the lock ring and remove the filter lid.
4. Lift out the cartridge element.
5. In most cases the element can be easily cleaned with a garden hose using good velocity sprayed directly on the pleats.


NOTE

Algae, calcium, clay, suntan oil and body oils can form a coating on the element which may not be easily removed with normal hosing. These materials can be removed by soaking the element in a filter de-greaser. Your local NEPTUNE FOR SWIMMING POOLS dealer will be able to recommend suitable products.

CARTRIDGE RE-ASSEMBLY INSTRUCTION


1. Install the cartridge(s) and centre pipe so that it is located in the bottom spigot.
2. Ensure the filter lid O'ring is clean, lubricated with O'ring lubricant and located in the bottom groove.
3. Replace the lid and press firmly in place. Screw down the lock ring, hand tight is sufficient - DO NOT OVERTIGHTEN.
4. Make sure the pump is primed according to manufacturer's directions.
5. Ensure all valves are open on suction and discharge lines.
6. Start the pump.
7. Close the air bleed valve when all air has been expelled.

SPECIFICATIONS

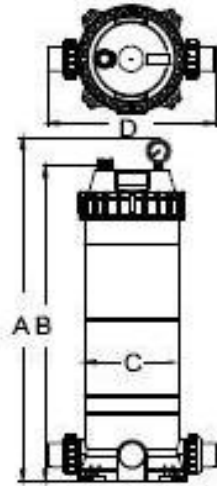

Model	High mm A	High mm B	Diameter mm C	Diameter mm D	Filtration Area (m ²)	Design Flow (m ³ /hr)
CF50	625	567	225	397	4.63	11.4
CF75	805	747	225	397	7.00	17.0
CF 100	985	927	225	397	9.38	22.9
CF 150	1165	1107	225	397	13.72	33.4

REPLACEMENT PARTS OF CARTRIDGE FILTER

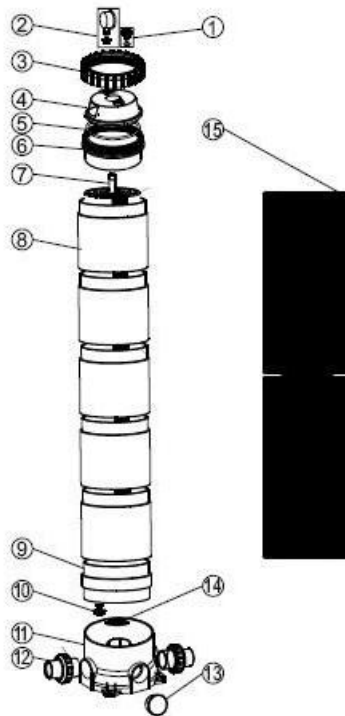

ITEM	PART No	DESCRIPTION	QTY
1	CF001	Air release valve	1
2	CF002	Oil pressure gauge with O'ring (50psi)	1
	CF003	Connector for pressure gauge/stopper	1
3	CF004	Ring lock for cartridge filter	1
4	CF005	Cartridge filter lid	1
5	CF006	O'ring for lid	1
6	CF007	Upper part of cartridge filter	1
7	CF008	CF50 PVC air vent pipe with cover	1
	CF009	CF75 PVC air vent pipe with cover	1
	CF010	CF100 PVC air vent pipe with cover	1
	CF011	CF150 PVC air vent pipe with cover	1
8	CF012	CF50 upper tank body	1
		CF75 upper tank body	2
		CF100 upper tank body	3
		CF150 upper tank body	4
9	CF013	Body support	1
10	CF014	Pressure release valve	1
11	CF015	Base for cartridge filter	1
12	CF016	1.5in Union for cartridge filters	2
	CF017	40mm union for cartridge filters	2
	CF018	2.0in union for cartridge filters	2
	CF019	50mm union for cartridge filters	2
13	CF020	Plug	1
14	CF021	Air vent pipe fastener	1
15	CF022	CF50 element	1
	CF023	CF75 element	1
	CF024	CF100 element	1
	CF025	CF150 element	1

WARNING

- ▲ THIS FILTER OPERATES UNDER HIGH PRESSURE WHEN ANY PART OF THE CIRCULATING SYSTEM (e.g. CLAMP, PUMP, FILTER, VALVES, ETC.) IS SERVICED, AIR CAN ENTER THE SYSTEM AND BECOME PRESSURISED. PRESSURISED AIR CAN CAUSE THE LID OR VALVE TO BE BLOWN OFF WHICH CAN RESULT IN SEVERE INJURY, DEATH, OR PROPERTY DAMAGE
- ▲ TURN PUMP OFF BEFORE CHANGING VALVE POSITION.
- ▲ TO PREVENT DAMAGE TO THE PUMP AND FOR PROPER OPERATION OF THE SYSTEM, CLEAN PUMP STRAINER AND SKIMMER BASKETS REGULARLY.
- ▲ DO NOT UNSCREW SCREWS OF FLANGE CLAMP WHILE PUMP IS RUNNING.

 **Neptune** is brought to you by **POOL PRO PRODUCTS**
for swimming pools